



**Black Plastic Cafetière 4 cup  
Instructions  
SKU 131417586**

**Please read these instructions before use and retain for future reference**

**Safety**

- KEEP OUT OF REACH OF CHILDREN.
- Always check the glass beaker for damage before use. Do not use the cafetière if the beaker is scratched, cracked or damaged.
- The surfaces of the cafetière will become hot during use. Do not touch and always carry by the handle.
- Do not use the cafetière on or near surfaces that are heat sensitive or those that may be damaged by water or steam.
- Do not overfill the cafetière and always lower the plunger slowly as hazardous hot water may be ejected if overfilled or excessive force is used.
- Not suitable for use on stoves or hotplates.

**Instructions for use**

1. Place the cafetière on a stable, dry, flat and non-slip surface and away from surfaces that may be damaged by heat, water or steam.
2. Hold the handle of the cafetière firmly and pull the knob of the plunger assembly vertically upwards to remove from the glass beaker.
3. Position the spout of the beaker away from the cafetière handle.
4. Spout position of the beaker should align and opposite with the handle.
5. Add **coarse** ground coffee (according to taste) into the beaker and fill the beaker with the quantity of hot water (not boiling) needed to make the required number of cups. Do not overfill, always leave a minimum gap of 2.5cm (1 inch) at the top of the beaker
6. Stir with the plastic spoon and allow the coffee to brew for a few minutes.
7. Refit the plunger assembly into the beaker and position the lid in the 'closed position' (mesh filter on the **opposite** side to the spout) to help prevent overflow of coffee during plunging.
8. Position the cafetière so that the spout on the glass beaker is pointing away from people and objects that will be damaged by hot water. Hold handle of the cafetière firmly and **press lightly** and vertically downwards on the plunger knob until the mesh filter rests on top of the coffee layer at the base of the beaker. Lowering the plunger slowly with minimal pressure produces best results and helps prevent water being ejected from the spout.
9. If the mesh filter clogs, or the plunger is difficult to depress, stop pressing and remove the plunger from the glass beaker. Remove the excess coffee from

the filter assembly and rinse clean. Stir the coffee, refit the plunger and the lid into the beaker and slowly plunge again.

10. Before pouring the coffee, turn the lid to the 'open position' (mesh filter **aligned** with the spout).

#### Note

- Before using for the first time, remove packaging and wash all parts in warm water with a little washing up liquid. Rinse and wipe dry.
- The glass beaker is not removable from the plastic frame.
- As an approximate guide use 1 rounded tablespoon of coffee for each 115ml (4oz) cup required.

#### Care instructions

- Avoid using metal spoons as these can scratch or chip the glass beaker and cause breakage.
- Unscrew the mesh filter assembly and clean all parts after each use.
- Hand wash in warm water with a little washing up liquid. Rinse and wipe dry immediately.
- Not suitable for dishwashers.

We care about our quality and what you think,  
If you have any comments, good and bad,  
Please call our Careline **0800 636 262**  
or visit **[www.sainsburys.co.uk](http://www.sainsburys.co.uk)**  
Your statutory rights are not affected.

Produced in China for  
Sainsbury's Supermarkets Ltd,  
33 Holborn,  
London EC1N 2HT.