

REMINGTON®

EST. NEW YORK 1937




**Power dry 2000
D3010**

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration. You must register within 28 days of purchase.

REMININGTON
EST. NEW YORK 1937

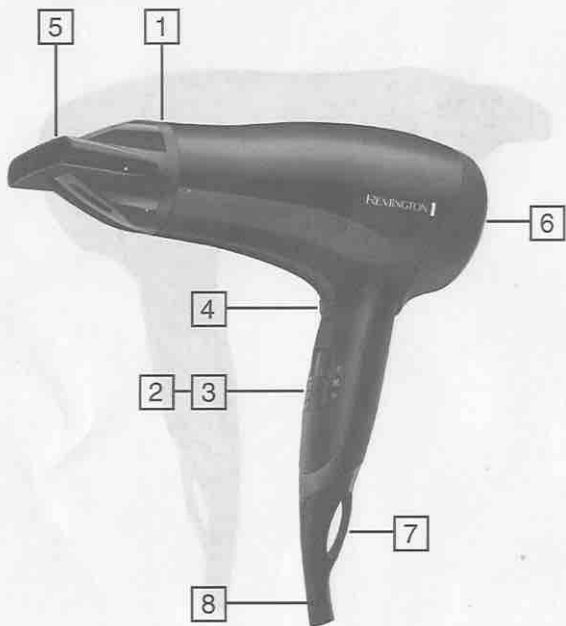


Power dry 2000
D310

remington.com

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.
WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS




- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
-  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- Keep direct airflow away from eyes or other sensitive areas.
- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.

- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.


PARTS

- | | |
|--------------------------------|-------------------------------------|
| 1. Ceramic-Ionic coated grille | 5. Concentrator |
| 2. 3 heat settings | 6. Removable easy clean rear grille |
| 3. 2 speed settings | 7. Hang up loop |
| 4. Cool shot | 8. Cord |

INSTRUCTIONS FOR USE

1. Wash and condition your hair as normal.
2. Squeeze out excess moisture with a towel and comb through.
3. Hairsprays contain flammable material – do not use while using this product.
4. Plug the product into the mains power supply.
5. To switch the product on slide the speed setting switch up once to the medium speed setting .
6. Select the desired temperature and speed setting using the switch on the handle.
7. To select heat setting slide the temperature setting switch to the low  or high setting .
8. For fast drying use the high heat / high speed function.
9. To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
10. To set your style, press the cool shot button whilst styling then release it to reactivate the heat.
11. After use, turn the appliance off and unplug.
12. To turn off slide the speed setting switch down to the '0' position.
13. Let the appliance cool down before cleaning and storing away.

ECO SETTING

- To use the dryer on the eco setting align the heat and speed setting switches with the eco symbol .

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- To remove the rear grille, for cleaning, hold the dryer handle in one hand, then with the other place your thumb and index finger either side of the rear grille. Pull the rear grille away from the dryer.
- To replace the rear grille hold in place with thumb and index finger again and click back onto the dryer.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region. Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorised dealer are not covered.



Guarantee period = 5 years from first retail purchase.

To claim the extra 1 year guarantee, register your product online within 28 days of purchase: uk.remington-europe.com/product-registration


If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.

SERVICE CENTRE

UNITED KINGDOM

 Tel 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk
Product support:
productsupport@Remington.co.uk

IRELAND

 Tel 142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>
Product support:
productsupport@Remington.co.uk

شكراً لقيامكم بشراء منتج Remington® الجديد. يرجى قراءة هذه التعليمات بعناية والاحتفاظ بها في مكان آمن. قم بإزالة جميع مواد التعبئة قبل الاستخدام.
تحذير: هذا الجهاز ساخن. أبقيه بعيداً عن متناول الأطفال في جميع الأوقات.

إجراءات وقائية هامة

- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين تتراوح أعمارهم من 8 سنوات وما فوق والأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو قليلي الخبرة والمعرفة. إذا تم الإشراف عليهم/إرشادهم ويفهمون المخاطر المعنية. ويجب ألا يعيب الأطفال بالجهاز. ويجب ألا يقوم الأطفال بالتنظيف والصيانة إلا إذا كان عمرهم أكبر من 8 سنوات وتحت إشراف. احفظ الجهاز والكابلات بعيداً عن متناول الأطفال دون سن 8 سنوات.
- ⊗ لا تستخدم هذا الجهاز بالقرب من أحواض الاستحمام أو الحمامات أو أي أحواض أخرى تحتوي على ماء.
- عند استخدام الجهاز في حمام، قم بفصله بعد الاستخدام طالما أن القرب من الماء يمثل خطراً حتى عند إيقاف الجهاز.
- تحذير - للحماية الإضافية، ينصح بتركيب أي جهاز تيار متبقي (RCD) بمقنن تيار تشغيل متبقي لا يتجاوز 30 مللي أمبير في الدائرة الكهربائية المغذية للحمام. استشر كهربائي.
- وفي حالة تلف سلك تغذية هذه الوحدة، توقف عن استخدامها فوراً وأعد الجهاز لأقرب أخصائي خدمة معتمد من Remington® للإصلاح أو الاستبدال لتجنب الأخطار.
- لا تلف السلك حول الوحدة. تحقق من انتظام السلك للبحث عن أي علامة تلف.
- لا تستخدم الجهاز إذا كان تالفاً أو به خلل.
- لا تسمح لأي جزء من الجهاز بلمس الوجه أو العنق أو فروة الرأس.
- حافظ على تدفق الهواء المباشر بعيداً عن العينين أو الأماكن الحساسة الأخرى.
- تأكد دائماً أثناء الاستخدام من أن شوكات المدخل والمخرج غير مسدودة بأي شكل من الأشكال لأن ذلك سوف يتسبب في إيقاف الوحدة تلقائياً.
- وإذا حدث ذلك، أوقف الوحدة ودعها تبرد.
- لا تترك الجهاز بدون مراقبة أثناء توصيله.
- لا تقيد الجهاز أثناء تشغيله.
- لا تضع الجهاز على أي مفروشات ناعمة.
- لا تستخدم ملحقات غير الملحقات التي تقوم بتوريدها.
- هذا الجهاز غير مخصص للاستخدام التجاري أو الصالونات.

الأجزاء

- | | | | |
|----|-------------------------------|----|-------------------------------------|
| 1. | الشبكة المغطاة بالخزف الأيوني | 5. | المكثف |
| 2. | 3 إعدادات للحرارة | 6. | شبكة خلفية سهلة التنظيف قابلة للنفك |
| 3. | 2 إعداد للسرعة | 7. | حلقة توقف |
| 4. | الهواء البارد | 8. | سلك |

تعليمات الاستخدام

1. اغسل ورتب شعرك كالمعتاد.
2. قم بإزالة الرطوبة الزائدة بمنشفة ومشط.
3. تحتوي سوائل رش الشعر على مواد قابلة للاشتعال - لا تستخدمها أثناء استخدام هذا المنتج.
4. قم بتوصيل المنتج بالكهرباء.
5. لتشغيل المنتج، حرك مفتاح إعداد السرعة مرة واحدة لوضع السرعة المتوسطة (II).
6. حدد درجة الحرارة المطلوبة واضبط السرعة باستخدام المفاتيح الموجودة على المقبض.
7. ولزيادة السرعة، اضغط المفتاح مرة أخرى على إعداد السرعة العالية (III).
8. لاختيار إعداد الحرارة، اضغط مفتاح إعداد درجة الحرارة على الإعداد المنخفض (I) أو المتوسط (II) أو العالي (III).
9. للتجفيف السريع، استخدم وظيفة الحرارة العالية / السرعة العالية.
10. للتصفيف الناعم، استخدم المكثف وفرشاة شعر مستديرة (غير مضمنة) أثناء التجفيف.
11. لضبط التصفيف، استخدم زر الهواء البارد أثناء التصفيف ثم اتركه لإعادة تنشيط الحرارة.
12. قم بإيقاف الجهاز وفضله بعد الاستخدام.
13. للإيقاف، حرك مفتاح إعداد السرعة لأسفل إلى الموضع "0".
14. دع الجهاز يبرد قبل تنظيفه وتخزينه.

إعداد البيئة

لاستخدام المجفف في إعداد البيئة، قم بمحاذاة مفاتيح إعداد الحرارة والسرعة مع رمز البيئة (♻️).

التنظيف والصيانة

- افصل الجهاز ودعه يبرد.
- للحفاظ على أفضل أداء للمنتج وإطالة عمر الموتور، من المهم إزالة أي غبار وأوساخ من شبكة فلتر الهواء بانتظام وتنظيفه بفرشاة ناعمة.
- لإخراج الشبكة الخلفية لتنظيفها، أمسك مقبض المجفف بيد واحدة ثم ضع الإبهام والسبابة على جانبي الشبكة الخلفية باليد الأخرى. واسحب الشبكة الخلفية بعيداً عن المجفف.
- لإعادة وضع الشبكة الخلفية في مكانها، استخدم إصبع الإبهام والسبابة مرة أخرى واضغطي على الشبكة لتثبيتها في مكانها في المجفف.

إعادة التدوير

لتجنب المشاكل البيئية والصحية الناجمة عن المواد الخطرة، يجب عدم التخلص من الأجهزة، والبطاريات القابلة لإعادة الشحن والبطاريات غير القابلة لإعادة الشحن التي تحمل علامة واحدة من هذه الرموز مع نفايات البلدية غير المصنفة. يجب دائماً التخلص من المنتجات الكهربائية والإلكترونية، وكذلك إذا أمكن، البطاريات القابلة لإعادة الشحن وغير القابلة لإعادة الشحن، في نقطة رسمية مناسبة لإعادة التدوير/ تجميع المخلفات.



الخدمة والضمان

سيتم تصحيح العيوب التي تؤثر على وظائف المنتج التي تظهر خلال مدة الضمان بالاستبدال أو الإصلاح وفقاً لخيارنا بشرط استخدام المنتج والحفاظ عليه وفقاً للتعليمات. لا تتأثر حقوقك القانونية.

لا يكون هذا الضمان ساري المفعول في حالة مخالفته للولايات المتحدة والقوانين المعمول بها، أو عندما يكون الضمان محظوراً بموجب أي عقوبات اقتصادية أو قوانين مراقبة الصادرات أو الحظر أو غيرها من التدابير التجارية التقييدية التي تطبقها الولايات المتحدة أو غيرها من الولايات القضائية المعمول بها. ويشمل ذلك، على سبيل المثال لا الحصر، أي مطالبات بالضمان تتعلق بأطراف من كوريا أو إيران أو كوريا الشمالية أو سوريا أو شبه جزيرة القرم أو تقع في هذه المناطق. يتم استبعاد المواد الاستهلاكية.

لا يتم تغطية العيوب الناجمة عن الإصلاح بواسطة موزع غير معتمد. إذا طلبت مركز الخدمة، يرجى أن يكون لديك رقم الموديل فن نكون قادرين على مساعدتك دون ذلك. ويمكن العثور على رقم الموديل على لوحة مقنن الجهاز.

اطلب ضمانك الإضافي لمدة 1 سنة بتسجيل منتجك على الانترنت. فقط اذهب لموقع:

www.remington-europe.com/register/



Calculus & Probability

...the ... of ...

Calculus

...the ... of ...

Probability

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

...the ... of ...

Ref. No. D3010

Type No. D3010

STANDARD OF THE ...

...

...

...

...

...

...

...

Ref. No. D3010

Type No. D3010

21/UK/ D3010 T22-7002091 Version 04 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Fairsworth,

Manchester

M35 0HS

remington-europe.com

© 2021 Spectrum Brands, Inc.